




## SW HDMI Series • Setup Guide

**IMPORTANT:**  
Refer to [www.extron.com](http://www.extron.com) for the complete user manual and installation instructions before connecting the product to the power source.

The Extron SW HDMI Series are two and four input, one output, High-definition Multimedia Interface (HDMI) switchers that allow multiple HDMI signals, including digital video, 3D signals, and embedded multi-channel digital audio, to be switched to one compatible display. These switchers support all standard single link HDMI (up to 2.25 Gbps) and DVI 1.0 signal formats and are compatible at 60 Hz with all HDTV resolutions up to 1080p and PC resolutions up to 2048x1080 with 12-bit color. They are fully HDCP compliant. This guide provides instructions for an installer to set up and operate these switchers.

For full installation, configuration, and operation details, see the *SW HDMI Series User Guide*, available at [www.extron.com](http://www.extron.com).

### Rear Panel Features and Connections

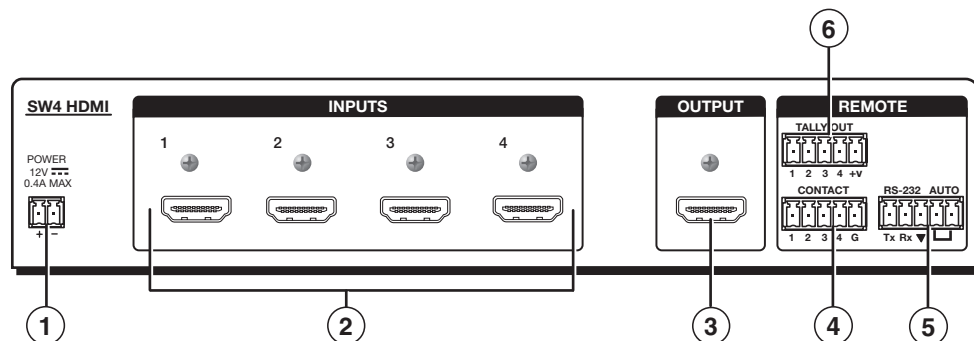

- ① Power connector for 12 VDC, 1 A power supply
- ② HDMI input connectors
- ③ HDMI output connector
- ④ Contact closure port
- ⑤ RS-232 and auto-input switching connector
- ⑥ Tally output port

### Installation Steps

1. **Turn off all of the equipment** and disconnect it from the power source.
2. **Mount the switcher** on a rack shelf or furniture (optional).
3. **Connect HDMI input sources** to one or more of the SW HDMI input connectors (② on the rear panel diagram above).


**NOTE:** LockIt® cable lacing brackets, one for each HDMI input and output connector, are provided with the SW HDMI. These brackets can be used to secure the HDMI cables to the rear panel connectors to reduce stress on the HDMI connectors and prevent signal loss due to loose cable connections. For information on attaching the LockIt brackets, see the *LockIt HDMI Lacing Bracket Installation Guide* card, available at [www.extron.com](http://www.extron.com).

4. **Connect an HDMI output device** to the output connector (③). By default, the EDID of this device is stored at the HDMI inputs.
5. **Connect control devices:** Connect your computer to one of the following SW HDMI communication ports to configure and control the switcher via SIS commands:

- **RS-232 port** — Connect the unterminated transmit, receive, and ground wires of the RS-232 cable to the first three pins on the provided 5-pole captive screw plug, as shown in the illustration at right. Connect the plug to the rear panel Remote shared connector (⑤ on the rear panel diagram above), and the other end of the cable to your computer serial port. Protocol for the RS-232 port is 9600 baud, 8 data bits, 1 stop bit, no parity.
- **Config port** — USB mini-B connector (⑥ on the **front panel diagram** on the next page) for USB control.

RS-232 Auto  
Tx Rx G

SW HDMI Series Switcher  
Rear Panel  
Remote Port

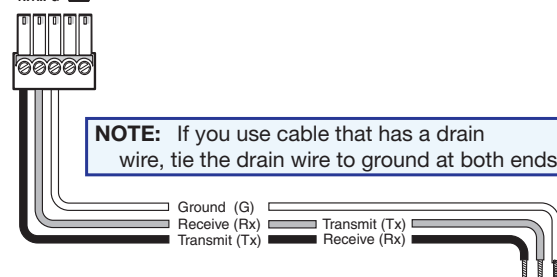


Computer or  
Control System  
RS-232 Port


## SW HDMI Series • Setup Guide (Continued)

6. **Enable auto-input switching** (optional). Use a jumper wire to connect pins 4 and 5 of the shared 5-pole captive screw plug. Attach the plug to the remote connector (⑤ on the rear panel diagram) if this was not done in step 5 for the RS-232 connection (see the illustrations below).
7. **Connect a contact closure device** (optional). Connect a contact closure device to the Contact port (④ on the **rear panel diagram** on the previous page) to enable input switching via contact closure.

If desired, connect an HDMI SM “Show Me” cable or wire the contact closure device to the Tally Out port to indicate the currently selected input.

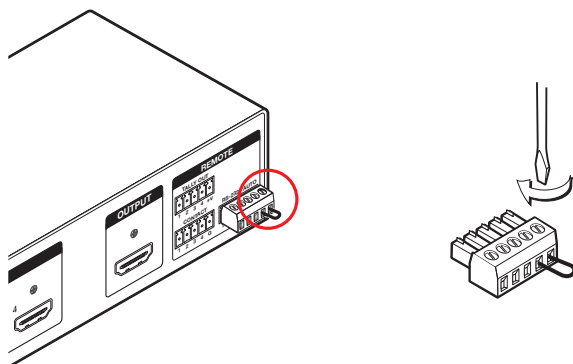

8. If necessary, wire a 2-pole captive screw connector (provided) to your power supply as shown below.

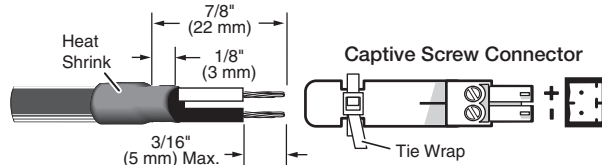


### ATTENTION:

- The power supply must not be permanently fixed to the building structure or similar structures.
- The power supply must not be located within environmental air handling spaces or the wall cavity.
- **Do not** connect power to the switcher until you have read the CAUTION and ATTENTION notices on page 7 of the *SW HDMI Series User Guide*.

9. Power on the output display.
10. Connect power to the switcher.
11. Power on the source devices.

## Front Panel Features

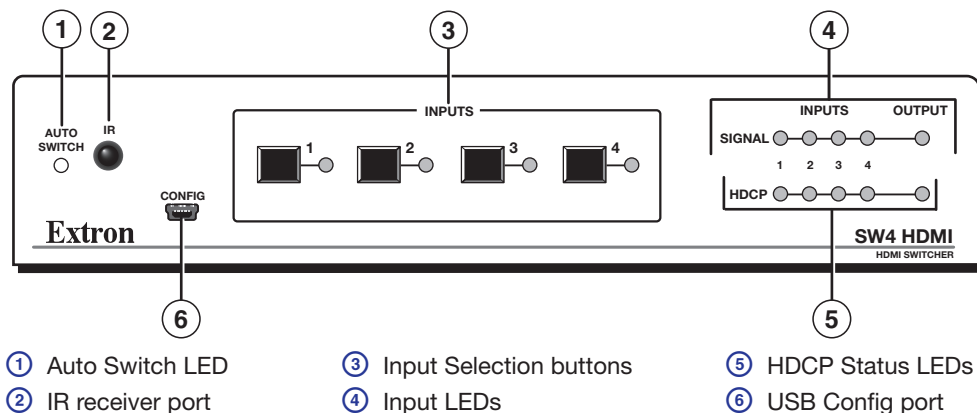

<b>Extron Headquarters</b> +1.800.633.9876 (Inside USA/Canada Only) Extron USA - West      Extron USA - East +1.714.491.1500      +1.919.863.1794 +1.714.491.1517 FAX      +1.919.863.1797 FAX	<b>Extron Europe</b> +800.3987.6673 (Inside Europe Only) +31.33.453.4040 +31.33.453.4050 FAX	<b>Extron Asia</b> +800.7339.8766 (Inside Asia Only) +65.6383.4400 +65.6383.4664 FAX	<b>Extron Japan</b> +81.3.3511.7655 +81.3.3511.7656 FAX	<b>Extron China</b> +4000.398766 (Inside China Only) +86.21.3760.1568 +86.21.3760.1566 FAX	<b>Extron Middle East</b> +971.4.299.1800 +971.4.299.1880 FAX	<b>Extron Korea</b> +82.2.3444.1571 +82.2.3444.1575 FAX	<b>Extron India</b> 1800.3070.3777 (Inside India Only) +91.80.3055.3777 +91.80.3055.3737 FAX
--	--	--	---	--	---	---	--